Cermax® Xenon Arc Lamps

Telecom

PE175B-10F and PE175B-10UV

CERMAX[®] FOCUSED XENON ARC LAMPS



Description

The Cermax® xenon arc lamp is an innovative lamp design in the specialty lighting industry. These lamps were introduced in the early 1980's and are now used in endoscopes in most major hospitals worldwide, in high brightness projection display systems, and for a wide variety of other high performance applications.

The PE175B-10F and PE175B-10UV Cermax® lamps have an integrated elliptical reflector, enabling high intensity, focused output of ultraviolet, visible, and infrared radiation. With their internal reflector and rugged ceramic body construction, Cermax® lamps are the safest and most compact alternative to conventional quartz xenon lamps. This makes them ideal for applications that require a high degree of illumination control. Current-regulated or power-regulated power supplies with output ripples of less than 5% are recommended. Single shot ignition

pulses are advised because radio frequency starters may damage the lamps internal reflector.

In addition to lamps, PerkinElmer Optoelectronics manufactures Cermax® arc lamp power supplies, lamp holders, OEM lighting systems, and fiber optic light sources.

Applications

- Medical and industrial fiber optic illuminators
- Machine vision
- Infrared and visible spotlights/beacons
- Spectroscopy
- · Microscopy
- UV Curing
- · Video projection



PE175B-10F and PE175B-10UV

Operational Specifications

| Description | Nominal | Range |
|-------------------|------------------------------------|----------------------|
| Power | 175 watts | 150-200 watts |
| Current | 14 amps (DC) | 12-16 amps (DC) |
| Operating Voltage | 12.5 volts (DC) | 10.5-13.5 volts (DC) |
| Ignition Voltage | 23 kilovolts (recommended minimum) | |
| _ | | |

Temperature 150° C (maximum)

Lifetime* 1000 hours (500 hour warranty)

* End of lamp life is defined as 50% of initial output.

Output at Nominal Power


F= UV Filtered Output/ UV = UV Enhanced Output

| Description | PE175B-10F | PE175B-10UV |
|------------------------|-----------------|-----------------|
| Radiant Output* | 34 watts | 34 watts |
| UV Output* | 1.5 watts | 4.9 watts |
| IR Output* | 18.8 watts | 18 watts |
| Visible Output* | 2740 Lumens | 2460 Lumens |
| Color Temperature | 5900 Kelvin | 5050 Kelvin |
| Peak Instabilities | 4% | 4% |
| Spot Size at Crossover | .09" at 50% pts | 0.9" at 50% pts |
| Spot Size at Crossover | .23" at 10% pts | .23" at 10% pts |
| *** | | |

^{*}These values indicate total output in all directions.

Wavelengths = UV<390nm, IR>770nm, Visible 390nm to 770nm.

Dimensions

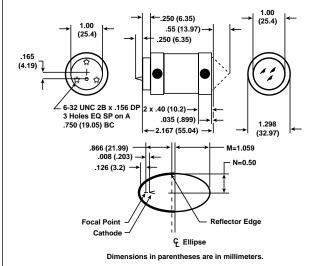

Physical Specifications

| Description | Specification |
|--------------------|------------------------------------|
| Arc Gap | .038 inch (0.96mm) |
| Reflector Geometry | Ellipsoidal 1= $X^2/M^2 + Y^2/N^2$ |
| Weight | 150 grams |
| Window Diameter | 1 inch (25.4 mm) |

Focused Output


| Description | Visible Output* | Total Output |
|--------------|-----------------|--------------|
| 6mm aperture | 1930 Lumens | 18.5 watts |
| 3mm aperture | 1170 Lumens | 9 watts |

^{*} Nominal values at 175 watts after 2 hour burn-in

Notes

- Lamp must not be operated with window facing upwards within 45° of vertical.
- 2. Seal temperature must not exceed 150° C.
- Current/power regulated power supplies and PerkinElmer lamp housing units are recommended.
- Lamp must be operated within recommended current and power range. Over powering may lead to arc instability, hard starting and premature aging.
- Hot mirror assembly is available for IR filtering.
- 6. CERMAX lamps are much safer lamps to use than their quartz xenon arc lamp equivalents. However, caution must be practiced when operating lamps because they are under high pressure, require high voltage, reach temperatures up to 200° C, and their IR and UV radiation can cause skin burns and eye damage. Read hazard sheet included with each lamp shipment.

Spectral Output

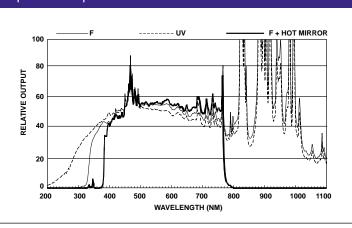

PerkinElmer welcomes inquiries about special lamps. We would be pleased to discuss the requirements of your application and the feasibility of designing a lamp specifically suited to your needs.

For more information e-mail us at opto@perkinelmer.com or visit our web site at www.perkinelmer.com/opto.

All values are nominal; specifications subject to change without notice.

USA: PerkinElmer Optoelectronics 44370 Christy St. Fremont, CA 94538 Phone: (510) 979-6500

Phone: (510) 979-6500 Fax: (510) 687-1140 Toll Free: (800) 775-6786 Europe: PerkinElmer Optoelectronics GmbH Wenzel-Jaksch-Str. 31 65199 Wiesbaden

Germany Phone: +49 611 492 0 Fax: +49 611 492 369 Asia: PerkinElmer Optoelectronics 47 Ayer Rajah Crescent #06-12 Singapore 139947

Phone: +65 775 2022 Fax: +65 775 1008



^{**} Beam Geometry defined as half angle at 10% PTS after 01/100/1000 hours.